



Heyco® Strain Relief Bushings LabKit #1 (Part No. 1999)

Use Heyco LabKits!

- Heyco LabKits are perfect for product design departments, experimental labs, and for all prototype work.
- Heyco Kits contain an assortment of our most popular Strain Relief Bushings.
- Heyco also offers lab kits for Liquid Tight Cordgrips, Bushings, Hole Plugs, Wire Positioning, Power Components and Grommets.

Heyco Products has the solution to your design challenges!

How to Choose a Strain Relief:

To pick a strain relief and get the best fit, ask yourself 4 questions:

1. What is my wire diameter or dimensions?
2. What is my panel thickness?
3. Do I already have a mounting hole and what are the dimensions?
4. Do I need a straight fitting, flex protection, a 90° bend or international approval?

Heyco Products, Inc.

"The First Name in Wire Protection"

HEYCO



Heyco® Hole Plugs LabKit #3

(Part No. 2997)

Use Heyco LabKits!

- Heyco LabKits are perfect for product design departments, experimental labs, and for all prototype work.
- Heyco Kits contain an assortment of our most popular plugs.
- Heyco also offers lab kits for Liquid Tight Cordgrips, Strain Relief Bushings, Bushings, Wire Positioning, Power Components and Grommets.

Heyco Products, Inc.

“The First Name in Wire Protection”



Heyco® Wire Positioning LabKit #5

(Part No. 3399)

Use Heyco LabKits!

- Heyco LabKits are perfect for product design departments, experimental labs, and for all prototype work.
- Heyco Kits contain an assortment of our most popular Cable Clamps.
- Heyco also offers lab kits for Liquid Tight Cordgrips, Strain Relief Bushings, Hole Plugs, Bushings, Power Components and Grommets.







Heyco® Liquid Tight Cordgrips

INSTALLATION INSTRUCTIONS for THREADED mounting holes:

1. Be sure that hole is free of burrs and panel surface around hole is smooth and free of debris.
2. Using the hex portion on the body (not the sealing nut), screw the fitting tightly into the threaded mounting hole.
3. Insert the cable through the fitting to the desired position.
4. Hand-tighten the SEALING nut as far as possible. Hold the BODY hex stationary with a wrench. Using a second wrench, tighten the SEALING nut until the wire is securely held in place.
5. Using a wrench on the BODY hex, check to make sure the fitting is still screwed tightly into the panel.
6. To disassemble for cable replacement, use a wrench to hold the BODY hex stationary and loosen the SEALING nut with a second wrench. Grip the disconnected cable and pull while turning the cable in the counter-clockwise direction.

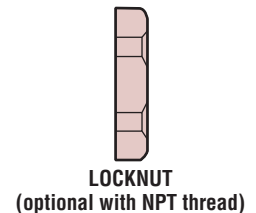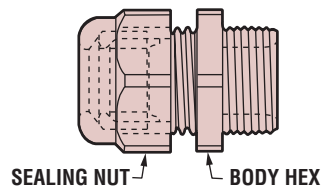

Heyco® Liquid Tight Cordgrips LabKit #8 (Part #3297)

Use Heyco LabKits!

- Heyco LabKits are perfect for product design departments, experimental labs, and for all prototype work.
- Heyco Kits contain an assortment of our most popular Liquid Tight Cordgrips
- Heyco also offers lab kits for Strain Relief Bushings, Bushings, Hole Plugs, Wire Positioning, Power Components and Grommets.





Heyco® Power Components LabKit #10 (Part No. 2901)

Use Heyco LabKits!

- Heyco LabKits are perfect for product design departments, experimental labs, and for all prototype work.
- Heyco Kits contain an assortment of our most popular Wire Connectors.
- Heyco also offers lab kits for Liquid Tight Cordgrips, Strain Relief Bushings, Hole Plugs, Bushings, Wire Positioning and Grommets.



Heyco® Empty LabKit Boxes (Part No. 3012)

Empty LabKit Boxes are available for sale. Now you can create your own customized LabKit assortments or sample boxes. Consult your Heyco Products Customer Service Representative for details.